How to Program a Transmitter for the TrensCenter Telemetry System

301 CH 8 0
40-150

 
Step 1: Click on **Status** (at the bottom of the main screen.)



Step 2: Click on Service (just above where you just clicked.)



Step 3: Input the code "329" on the numeric keypad.



Step 4: On the right side of the screen you should now see a list of frequencies in white boxes beside the channel numbers

Click on the channel number of the one you wish to program.

You will notice the box will change.

You can now input the new frequency in the box (using the numeric keypad).

The new frequency will overwrite the old frequency and the decimal point will be inserted automatically.

Step 5: When you are done inputting the new frequency, Press the channel number box again to lock in the new frequency.

Step 6: Admit the channel you have just programmed and put fresh batteries in the transmitter. **Test the transmitter for pickup.**

Determining the Frequency of the Transmitter.

The transmitter frequency is hidden within the transmitter's "serial number", usually the last five digits starting with a six.

Example: Serial # GTM8B7875608.30 It's frequency would be 608.30

If after following these instructions, your transmitter still fails to operate. Please phone Tech Support.

1-800-582-3348 Press "2" for Tech Support.